





BEDLINER INSTALLATION INSTRUCTIONS

without Plastic cover

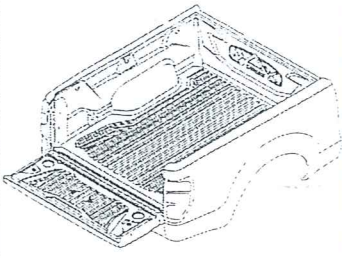

with Plastic cover

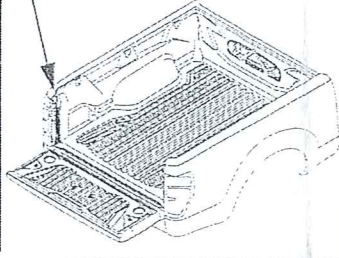


Caution for installation

Read this mounting manual carefully, before you start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : FOX O/R (UL) (LOGO MAX)
 Model name : FORD RANGER (T6) CAB 2011
 Instructions : F21-ULFOX02
 Inst. number : L03-1177

Component parts

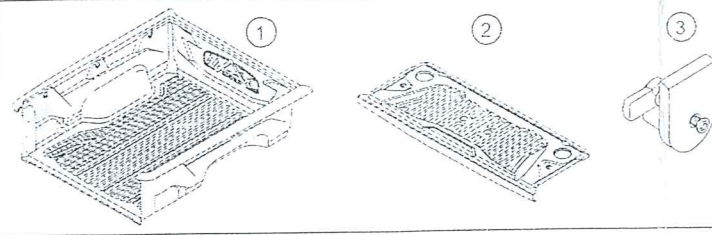

No.	Part Name	Q'ty
1.	Body liner	1 Pc.
2.	Tailgate	1 Pc.
3.	U-lock	6 Sets
4.	Plain washer	4 Pcs.

Tools used



Instruction procedure

